

# A/S Thor-Lem

Bredgade 2  
DK-6940 Lem St.  
Tel.: +45 97 34 10 99  
Fax: +45 97 34 20 99

CVR: DK-13844542  
Bankref: RINGKØBING  
LANDBOBANK A/S  
Swift ID: RINGDK22  
Int. IBAN: DK 75 767000002073752

Home page: [www.thorlem.dk](http://www.thorlem.dk)  
E-mail: [thorlem@thorlem.dk](mailto:thorlem@thorlem.dk)

Lem d. 31.05.2015

## Oil reservoir air bleed

---



When our pumps leave our factory the air bleed screw cap is always closed. It is therefore important for this to be open when the pump is mounted.

If this does not done, vacuum will occur in the oil tank and the functional pump quality will be significantly degraded.

### Directions:

Hold the plug with a 17 mm wrench or similar and take a flathead screwdriver and turn the little shiny screw 360 degrees counter clockwise.

The air will then be able to pass through the cap unobstructed and pump perform the desired functionality.

*This applies to all our pump types with oil reservoir!*